

Before you begin

Wardrobes and cabinets are designed for fitted installation, not freestanding use.

Fitted installation required

These wardrobes and cabinets must be fitted and securely fixed in place. They are not intended to be freestanding. Units are supplied flat packed with cabinet fittings. You will also need suitable wood screws for hinge plates and adjustable-leg mountings. Assembly is intended for a competent DIYer, carpenter or bedroom fitter.

FITTINGS AT A GLANCE



Cam fittings

Insert into large pre-drilled holes. Keep the arrow visible and pointing towards the panel edge.



Metal dowels

Fit into matching pre-drilled holes. The dowel head locates inside the cam.



Beech dowels

Apply a little wood glue, then tap gently into the remaining locating holes.



Shelf supports

Supplied where adjustable shelves are included with the wardrobe.



Adjustable legs

100 mm legs for bedroom units, adjustable by approximately +20 mm / -20 mm.



Soft-close hinges

All hinges are supplied with integrated soft close and mounting plates.



Hanging rail

Oval rail and end supports are supplied as standard with robes and linen presses.



Cam connection

Align the metal dowel with the cam, then turn the cam to draw the panels together.

Identify the cabinet parts

Check the panels and pre-drilled hole positions before assembly.



Single hanging



Double hanging



Linen press

PANELS SUPPLIED WITH EACH UNIT

2

Side panels

Single hanging: position the line of holes 400 mm from the end at the top. Double hanging: shelf-fixing holes sit around the middle.

1

Top panel

Pre-drilled for the cabinet fittings.

1

Base panel

Pre-drilled for cabinet fittings and, underneath, for the adjustable-leg mounting bosses.

1

Fixed shelf

Pre-drilled for the cabinet fittings.

Drawer-box options

Choose Blum Metabox soft close or Blum Antaro soft close drawer boxes. Drawer-runner positions are pre-drilled.

Build the cabinet

Protect the panels, align the fittings and tighten cams only after the parts sit squarely together.

1

Prepare the base panel

Identify the base by the pre-drilled holes on its underside. Position each adjustable-leg mounting boss and secure with suitable 16 mm wood screws.

2

Fit cams and dowels

Lay panels on a clean, debris-free floor to avoid scratches. Insert cams into the large circular holes with the arrows visible and pointing towards the panel edge. Fit metal dowels into the adjacent matching holes. Apply a little wood adhesive to the beech dowels and tap them into the remaining holes, leaving enough exposed to locate in the adjoining panel.

3

Join the first side, top, base and shelf

Attach the base, top and fixed shelf to one side panel. Align every cam and dowel with its matching hole. When the parts sit squarely together, turn each cam in the direction of its arrow to lock the joint. Do not overtighten.

4

Fit the back and remaining side

Align the back panel with the cam-and-dowel fittings. Lock the cams once the panel is fully seated. Fit the remaining side panel in the same way, checking that the cabinet remains square.



CHECK EACH JOINT

The dowel head must locate inside the cam before the cam is tightened. Keep the panels aligned throughout.

Finish and secure

These units require fitted installation. They are not intended for freestanding use.

5 Fit the feet and raise the unit

Tap each adjustable foot into its mounting boss. With two people, carefully raise the cabinet upright. Keep the legs straight while lifting; allowing them to swivel can damage or break them.

6 Install the hinge mounting plates

Screw the mounting plates into the pre-drilled positions on the side panels. Check every plate is level and secure before attaching the doors.

7 Position, level and secure

Move the cabinet into its final position. Adjust the feet until level and stable. Secure the unit to the wall with fixings suitable for the wall construction. Then fit the doors and plinth. For adjustable shelves, insert the shelf supports at the desired height and place the shelves on top.

IMPORTANT / FITTED INSTALLATION ONLY

Wardrobes and cabinets must be fitted and securely fixed in place; they are not freestanding furniture. Secure tall units to a suitable wall before fitting the doors. Use fixings appropriate to the wall type and check for concealed pipes or cables before drilling.

Need professional assistance?

These units are intended for bedroom fitters, carpenters and competent DIYers. If you are unsure about any stage, arrange installation by a qualified tradesperson.