

# How to Calculate Wardrobe Door Sizes

A simple guide to cabinet measurements, door height and door width. Measure in millimetres (mm) and write sizes as height × width.

## 01 / CHECK HOW YOUR DOORS WILL FIT


### OVERLAY DOORS

Doors cover the cabinet edges. Measure the outside of the cabinet body.

### INSET DOORS

Doors sit inside the cabinet opening. Measure the inside opening.

## 02 / MEASURE THE CABINET & CHECK HANGING

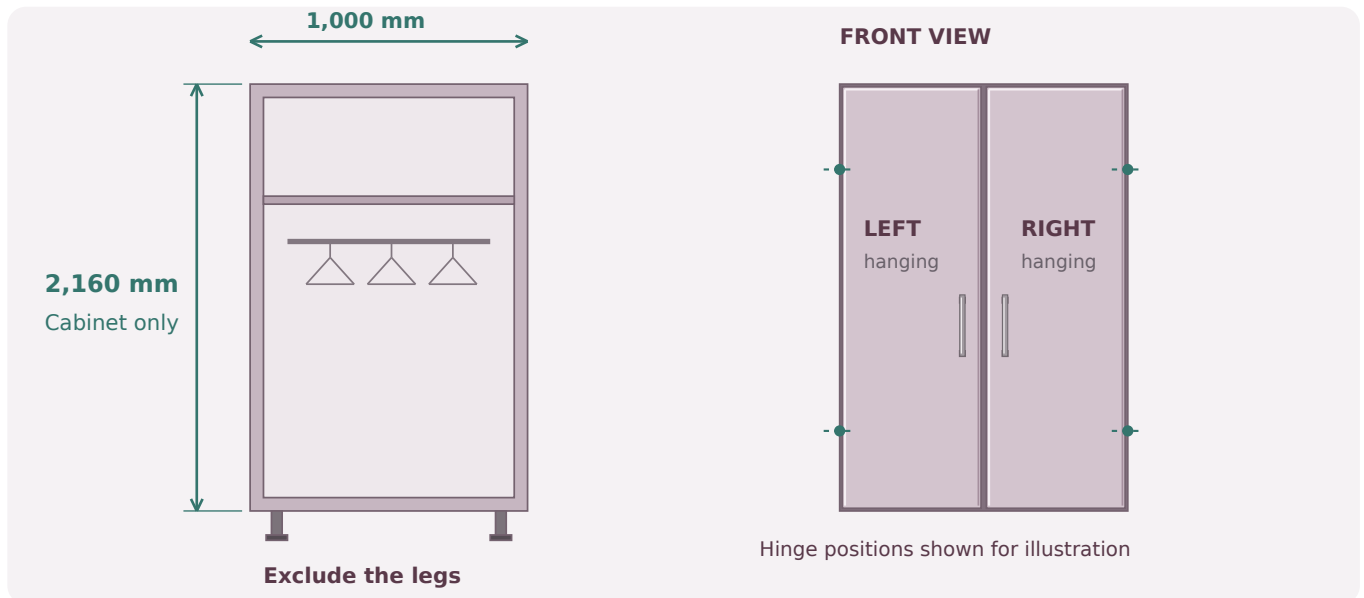

Illustrations are not to scale. Identify hanging from the front of the door.

## 03 / CALCULATE TWO EQUAL OVERLAY DOORS

Example cabinet: 2,160 mm high × 1,000 mm wide. This example uses a 5 mm height deduction and a 4 mm deduction from each half-width.

- |   |                             |                                 |
|---|-----------------------------|---------------------------------|
| 1 | Door height                 | $2,160 - 5 = 2,155 \text{ mm}$  |
| 2 | Divide cabinet width by two | $1,000 \div 2 = 500 \text{ mm}$ |
| 3 | Width of each door          | $500 - 4 = 496 \text{ mm}$      |

### DOOR SIZE FOR THIS EXAMPLE

**2 doors, each 2,155 mm high × 496 mm wide**

Before ordering: confirm the fitting gaps and hinge requirements for your cabinet. The deductions above apply to this overlay example; inset doors need allowances based on the inside opening. Check both sides and recheck all sizes.