



Dentil Rail

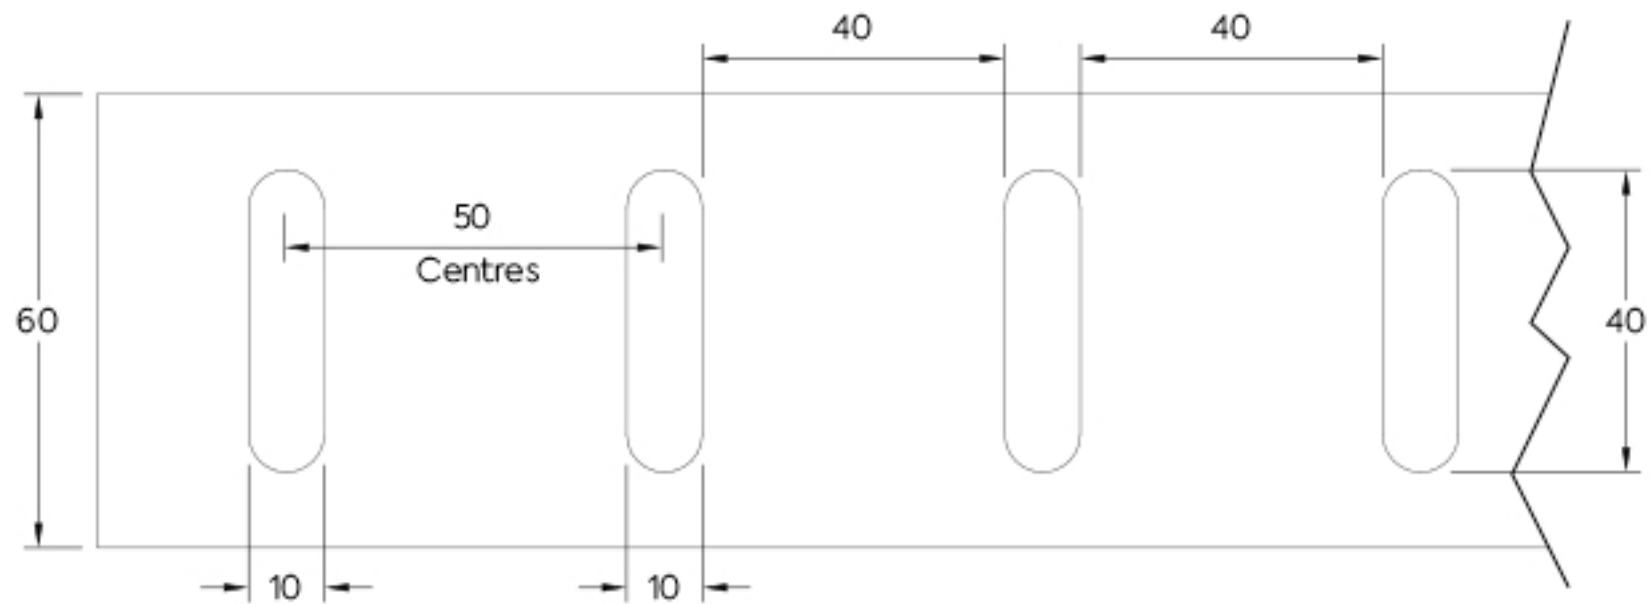

The Dentil rail is supplied at 2540mm long x 60mm high – groove positions are as shown, at 50mm spacings, giving 40mm gaps between grooves. Please consider this when cutting the Dentil rail, to ensure grooves are centrally positioned across the cut length.

As shown below; the Dentil Rail can be combined with Classic Cornice, and 18mm décor material (or plinth) to create design features. A simple combination of fixing battens and/or screws/brackets can be used to secure this into position.

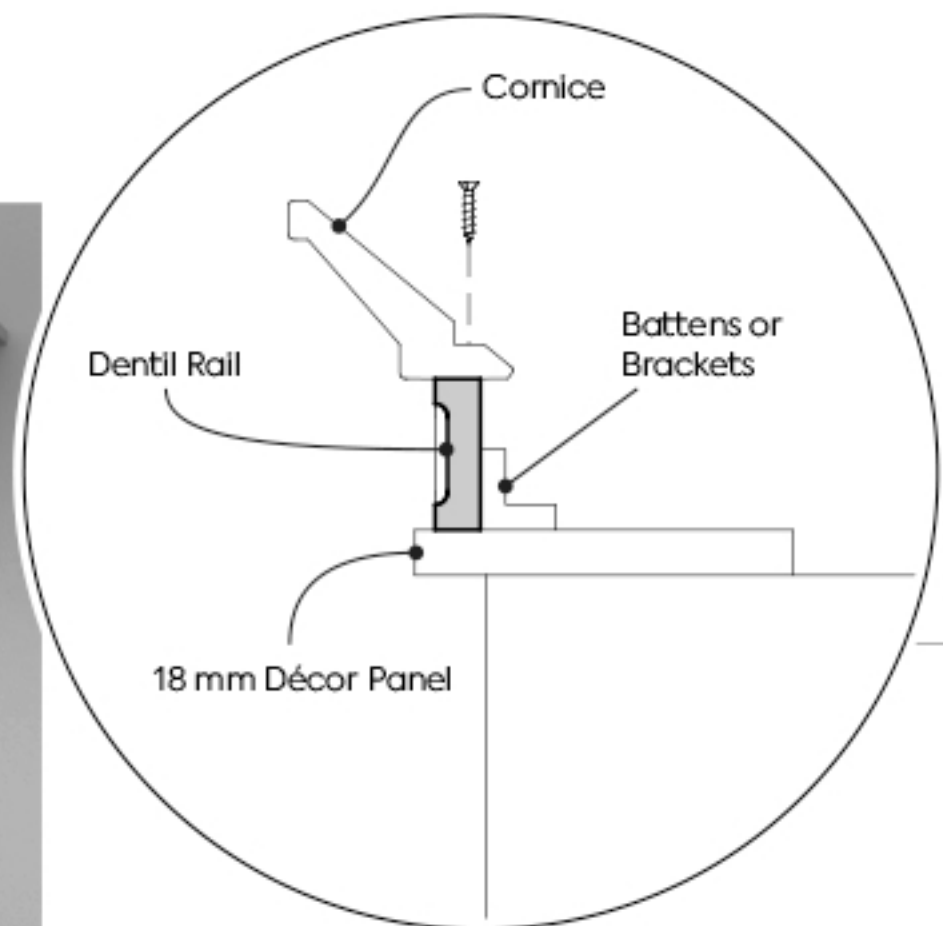

We recommend such a feature is cut & fitted in layers, to build up the overall profile – firstly cut & secure the 18mm material, then the Dentil Rail, and finally the Cornice.

By using overlaps as shown (rather than everything flush) it will give a better overall effect and help to hide any discrepancies in cutting/mitres.

Wall Cabinet